

CARE & CLEANING OF YOUR ELECTRIC BLANKET

Taking care of your Electric Blanket is easy and safe as long as you follow the steps outlined below:

- **DO NOT Dry clean**
- **DO NOT Iron**
- **DO NOT Bleach**
- **DO NOT use a wringer.**
- **DO NOT turn on the Electric Blanket until it is completely dry.**
- **DO NOT use mothballs or sprays of any kind.**

SPOT CLEANING

- Unplug and remove the controls to the Electric Blanket.
- Wet sponge the affected area using a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
- Gently sponge the affected area with clean water.
- Use a neutral coloured towel to absorb excess water.

HAND WASHING

For blankets with fixed controllers, the controller or switch must not be allowed to get wet during washing.

- Fold and presoak the Electric Blanket for 15 minutes in a mild soap and lukewarm water solution.
- Ensure the water temperature is less than 30°C.
- Gently squeeze the soap suds through for a few minutes.
- Rinse in fresh lukewarm water.

AIR DRYING

Gently stretch the Electric Blanket to its original size. Air dry over a clothes line or shower rod.

DO NOT use clothes pegs or clips of any kind. DO NOT use the Electric Blanket until it is completely dry.

For blankets with fixed controllers, ensure the cord is positioned so that water cannot flow into the controller or switch.

MACHINE WASHING (BLANKETS WITH DETACHABLE CONTROLLERS ONLY)

- Unplug and remove the Electric Blanket controls.
- Fold and presoak the Electric Blanket for 15 minutes in a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
- Wash in mild soap and lukewarm water on the delicate or gentle cycle for 2 minutes.
- Rinse in fresh lukewarm water.

MACHINE DRY (BLANKETS WITH DETACHABLE CONTROLLERS ONLY)

- Place the blanket into the dryer and tumble dry on low setting until damp. Approx 30 minutes.
- Remove the blanket while it is still damp and gently stretch to its original size.
- Continue to air dry over a clothes line or shower rod. (DO NOT use clothes pegs or clips of any kind).

DO NOT USE IF MOIST OR WET