




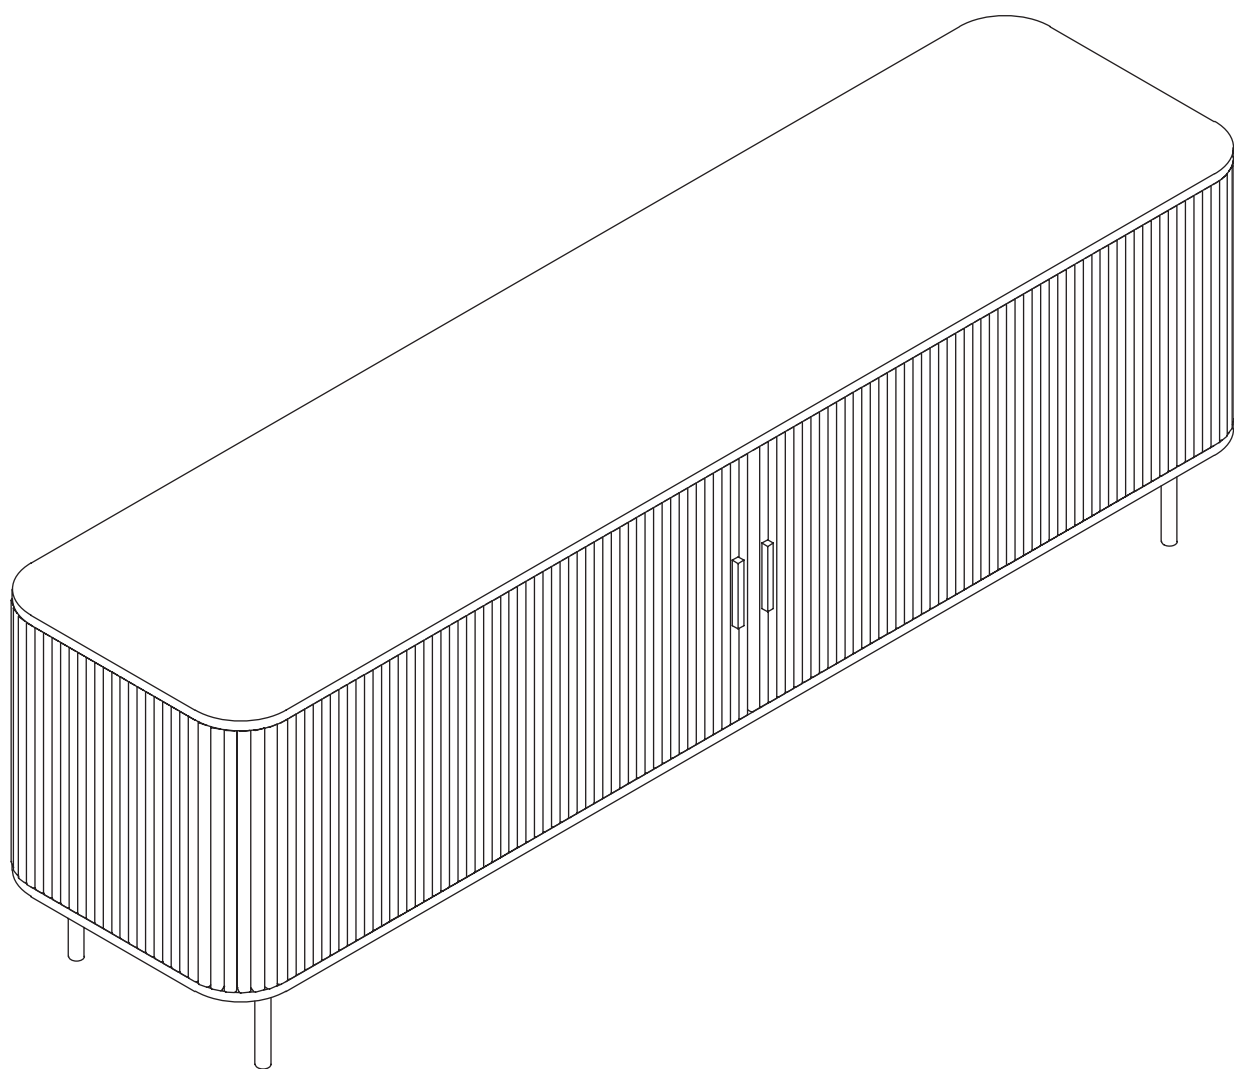


HARDWARE LIST

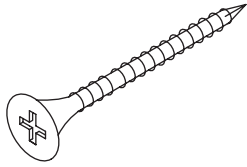


15 x A
Screw

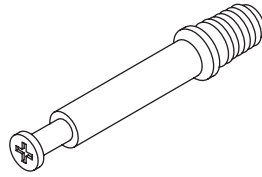

22 x B
Quickfit Screw

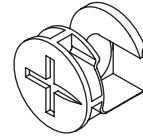


22 x C
Cam Lock

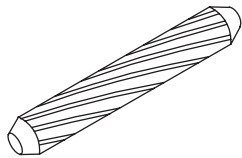


32 x D
Wooden Dowel



2 x E
Handle




4 x F
Screw

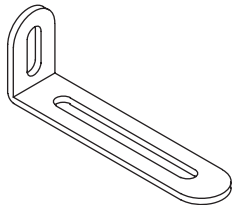


1 x G
Wall Bracket




25 x H
Screw



16 x I
Screw
















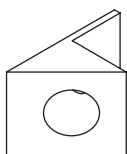


16 x J
Wedge






1 x K
Wall Plug



PARTS LIST

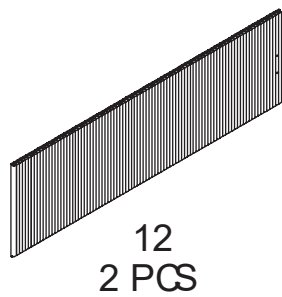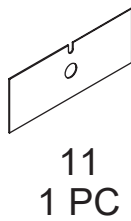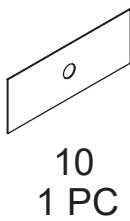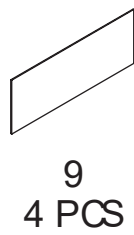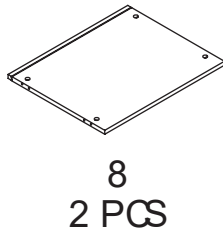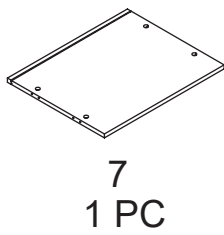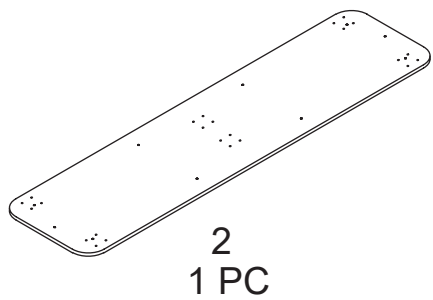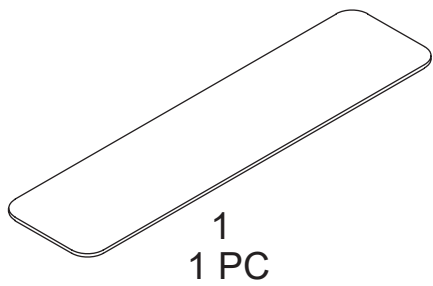



STEP 1

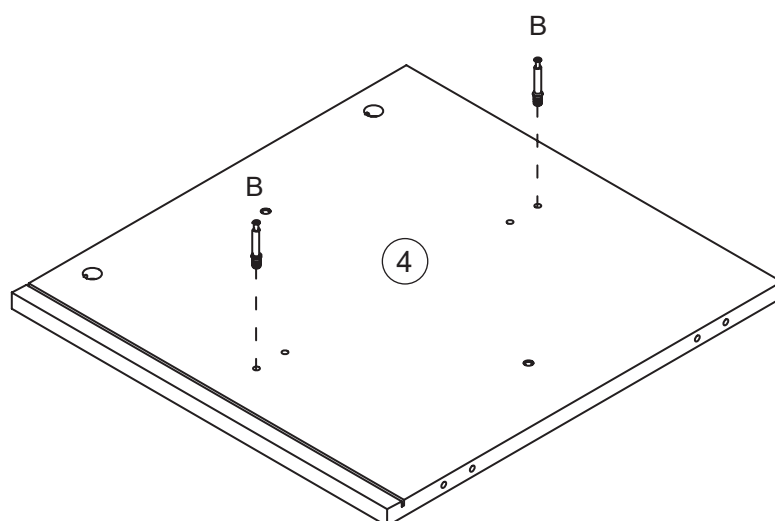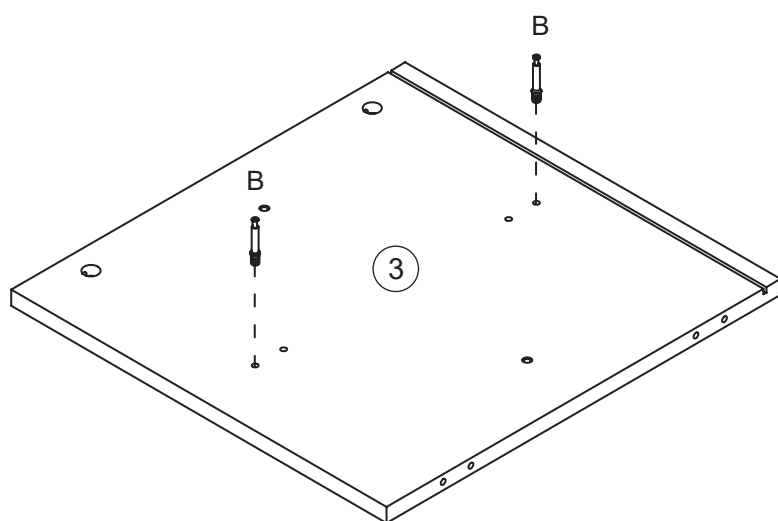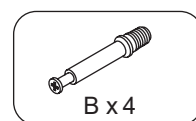




STEP 2

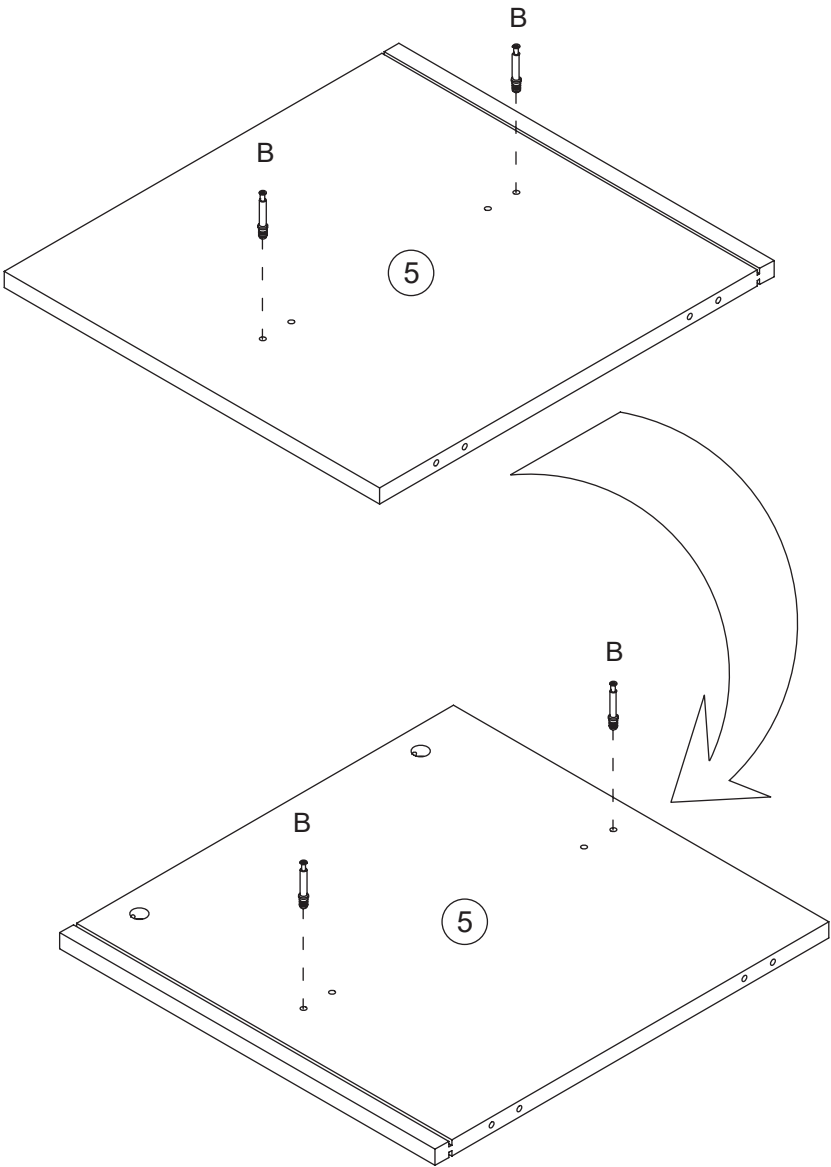


STEP 3

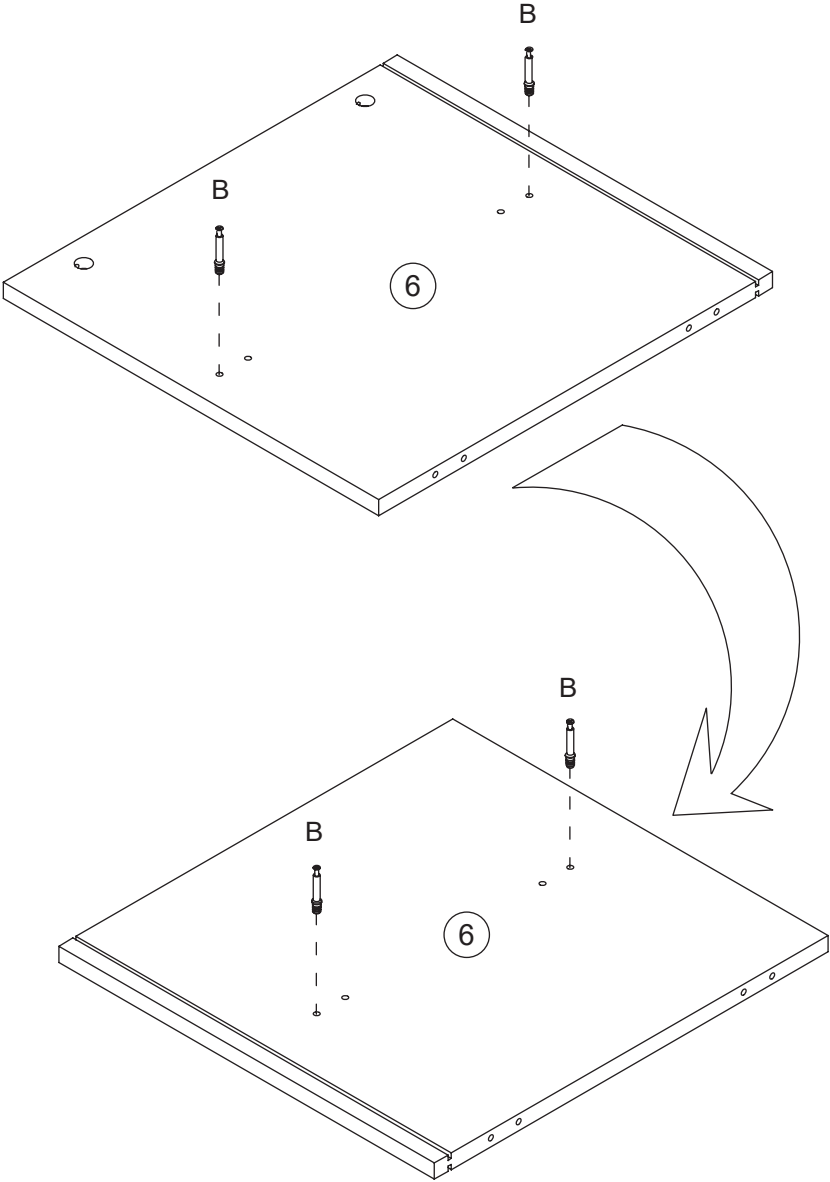

STEP 4

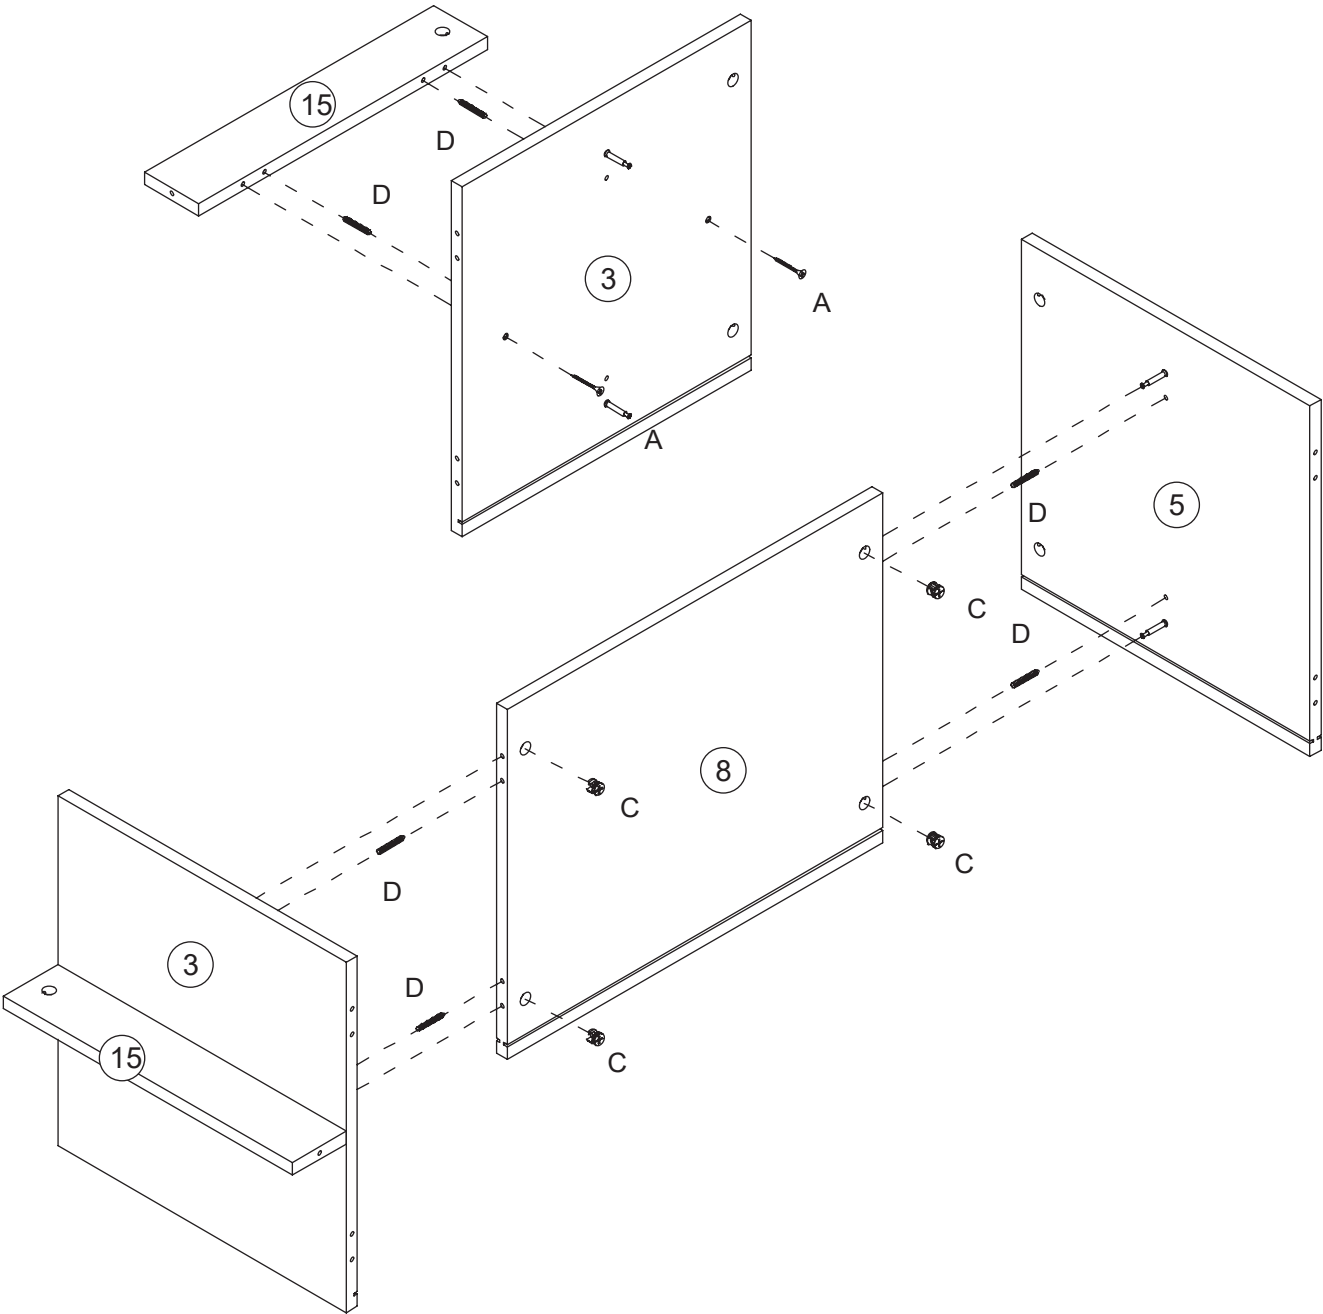


STEP 5

- 




A x 2
- 

C x 4
- 



D x 6

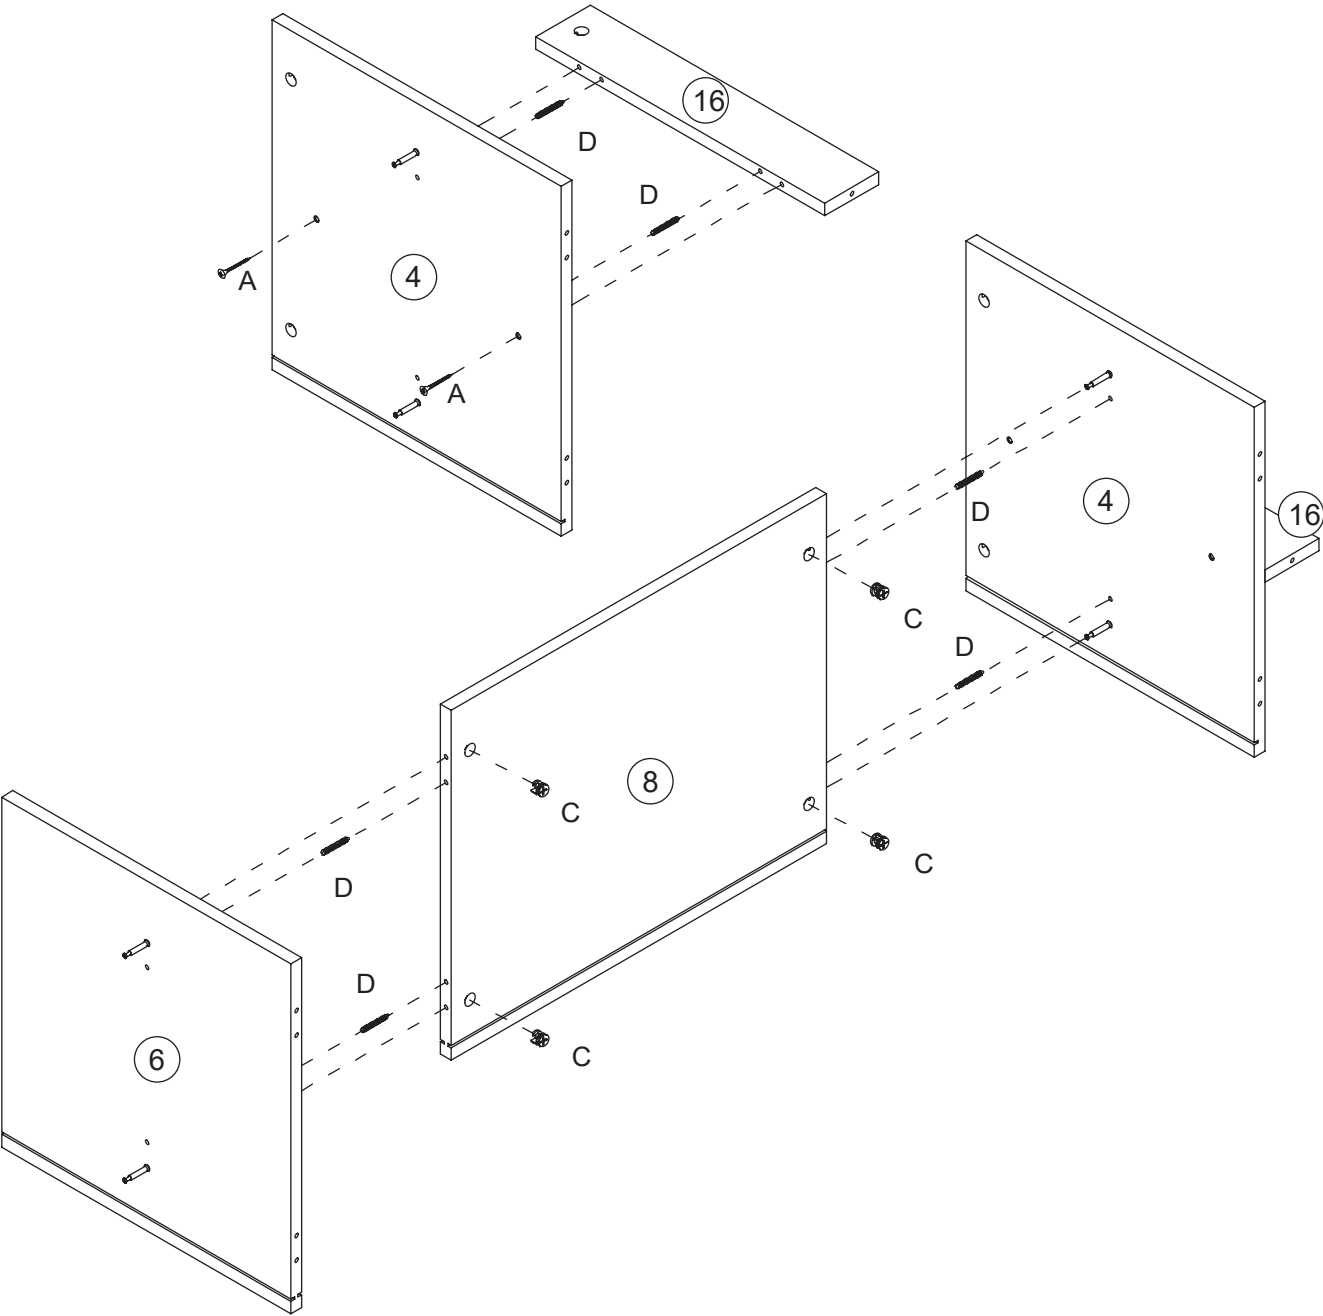


STEP 6

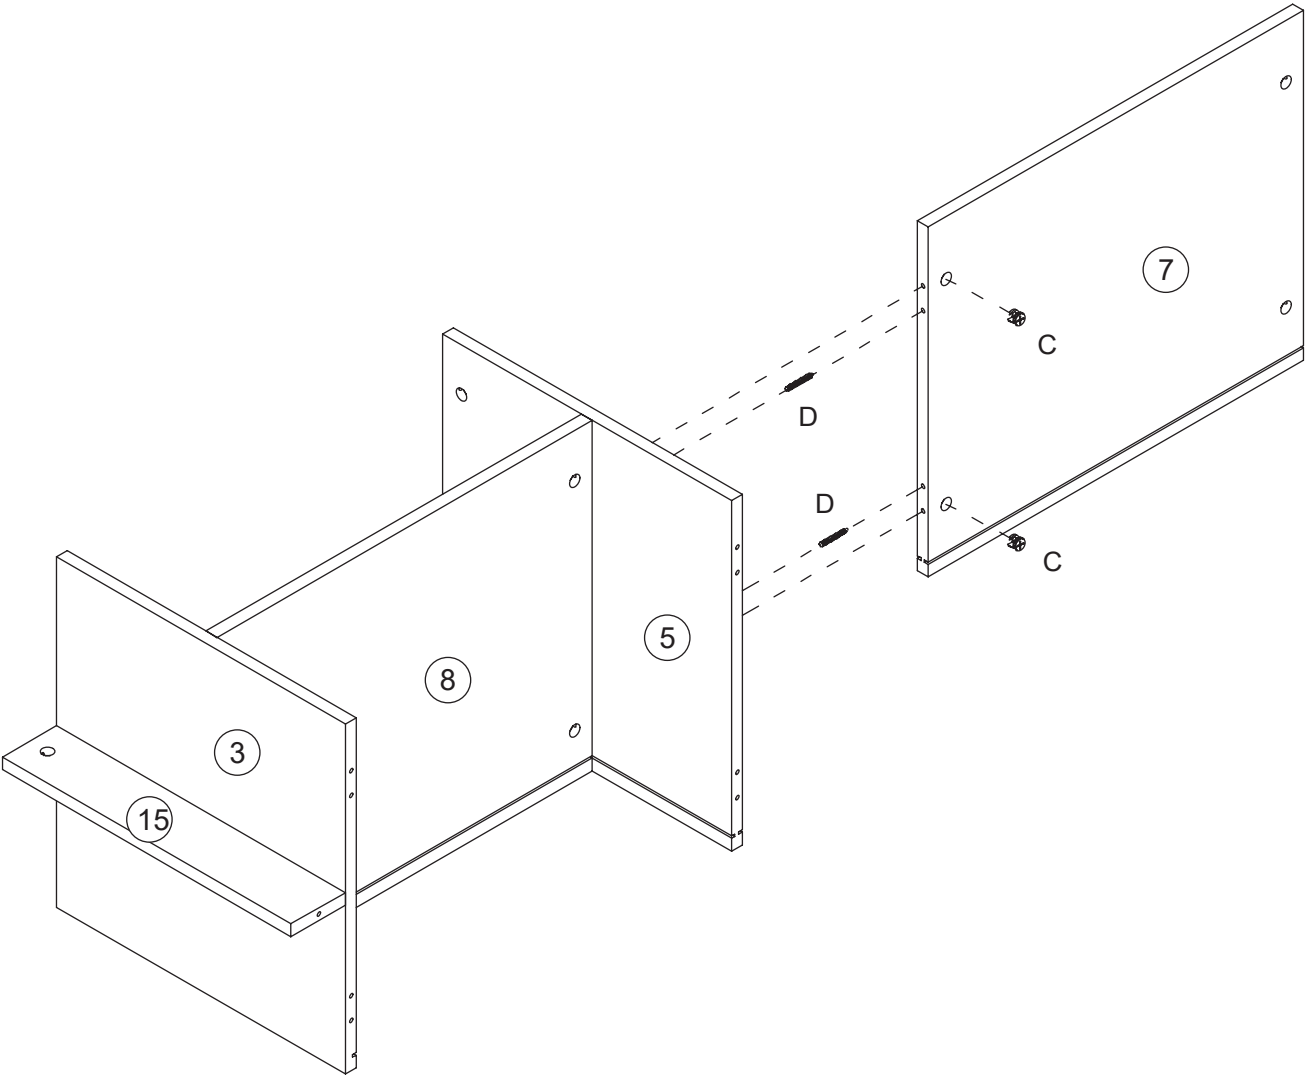

STEP 7

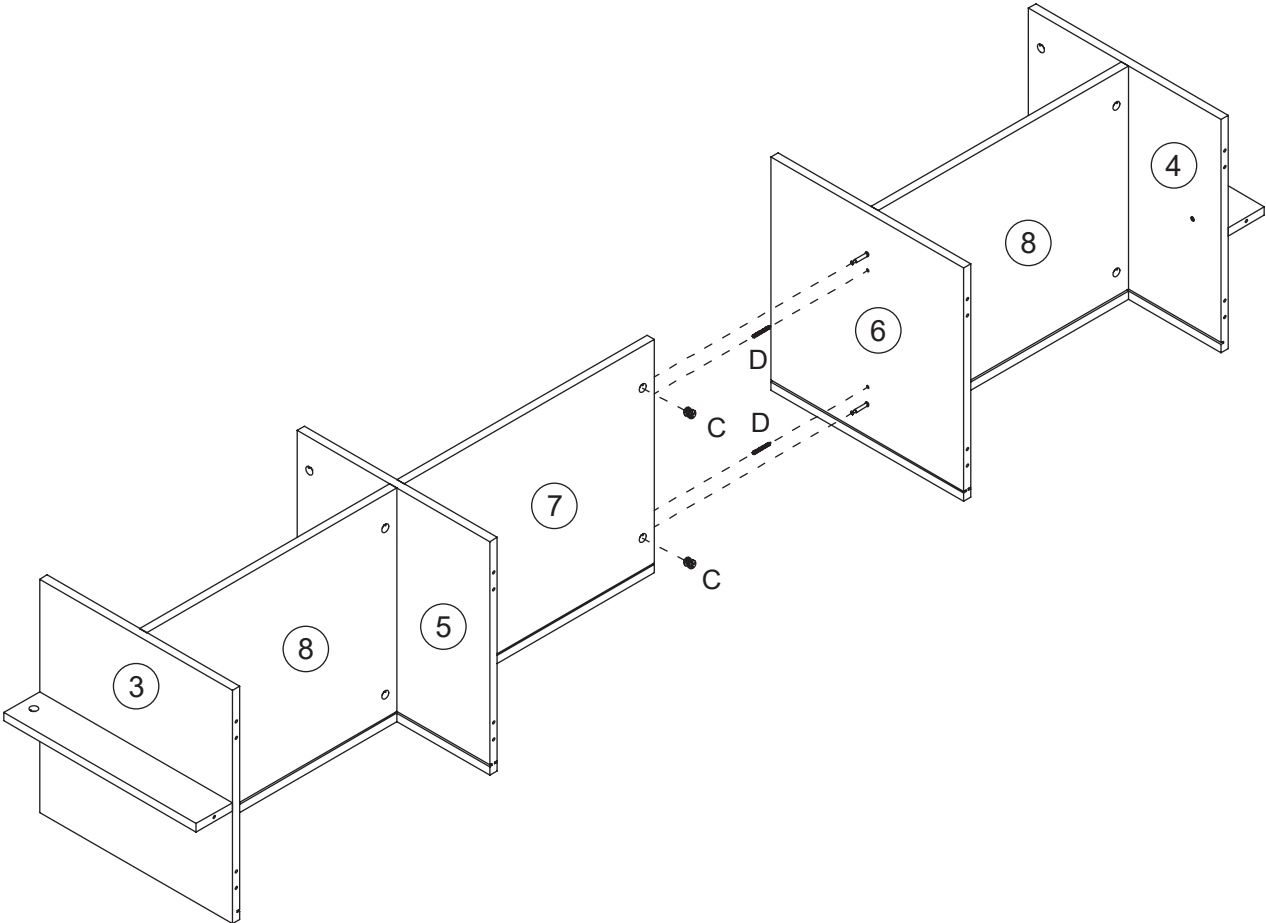


STEP 8

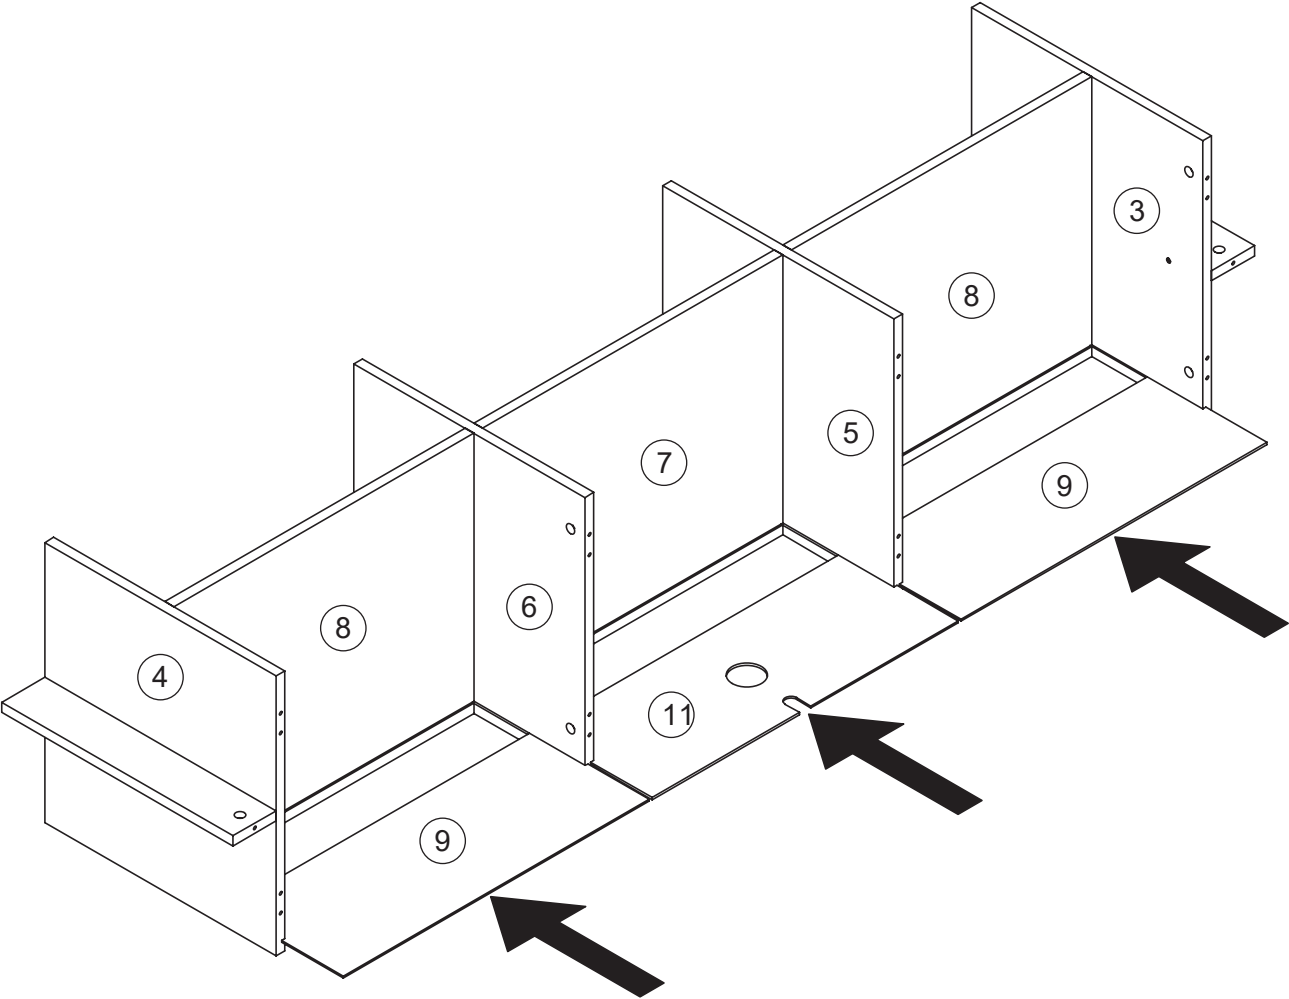

STEP 9

Insert quickfit screws (B) to




B x 10





G x 1




H x 1

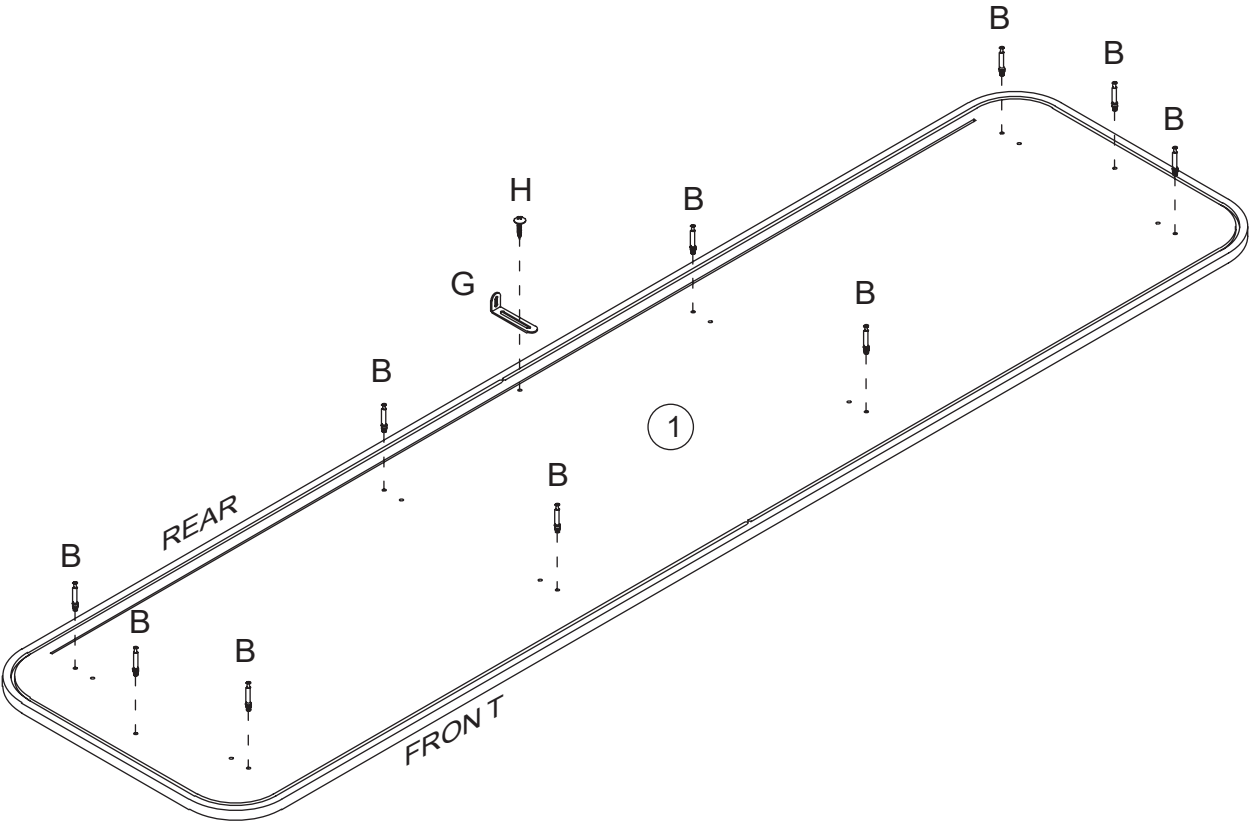

STEP 10

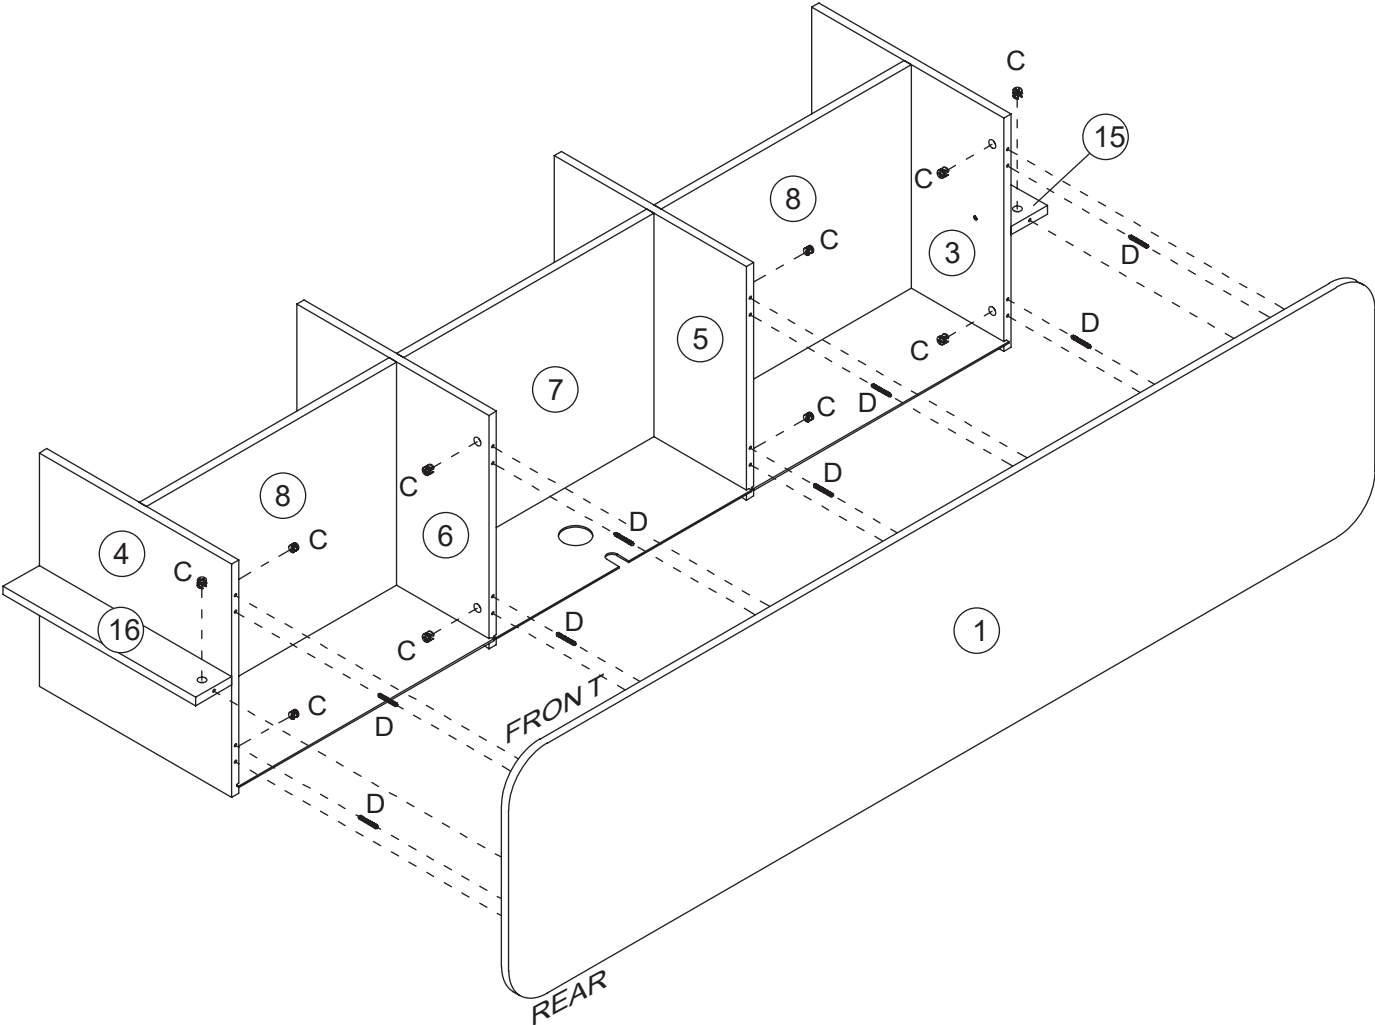

STEP 11

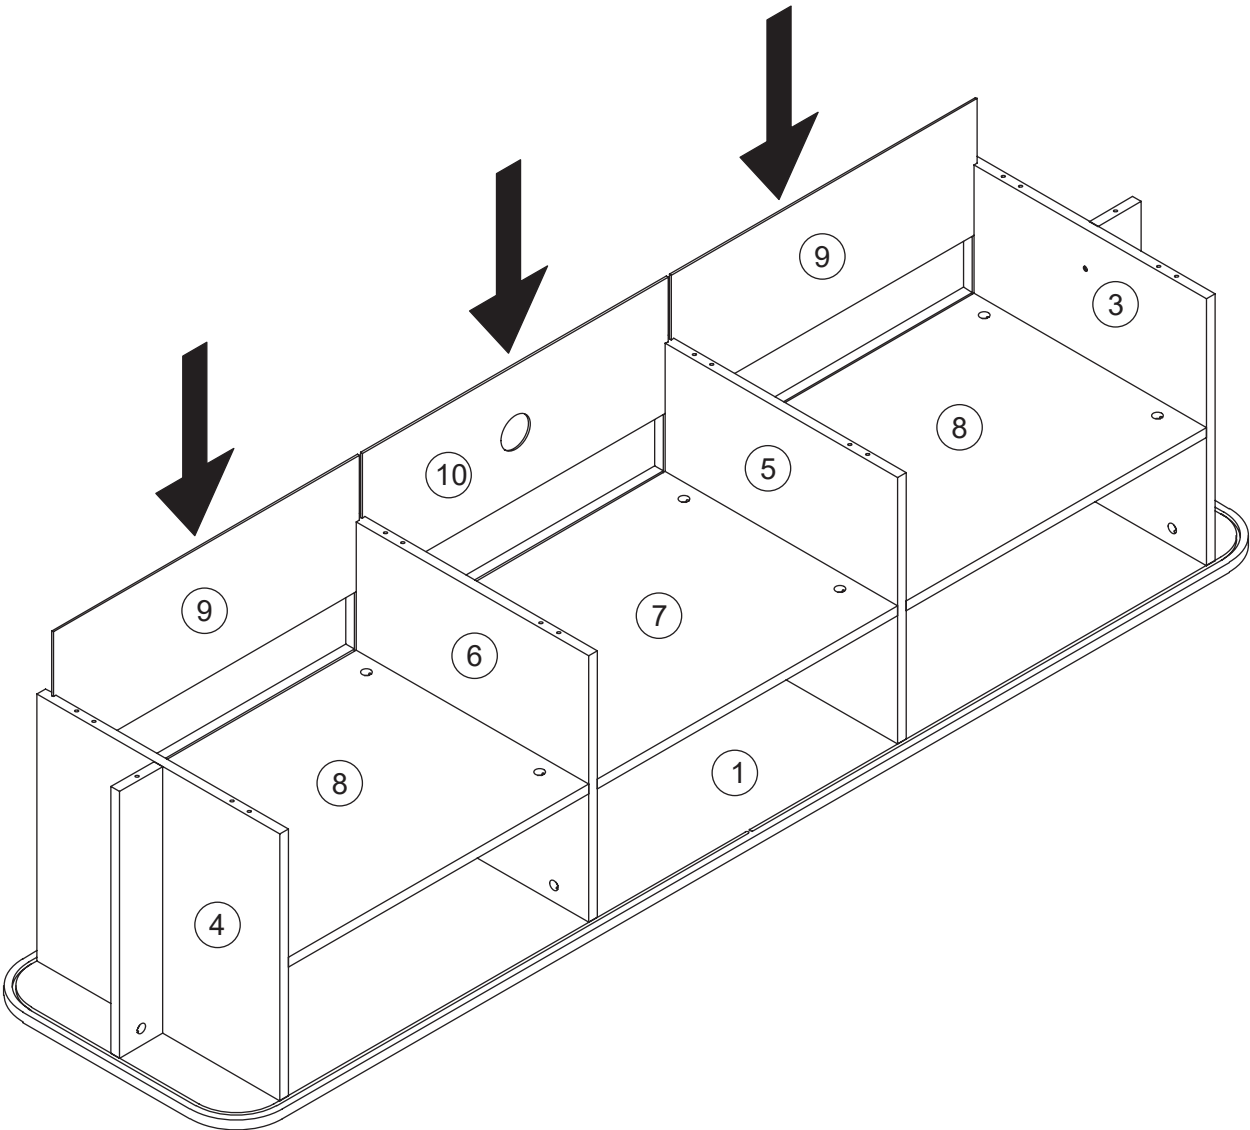


STEP 12



E x2




F x4


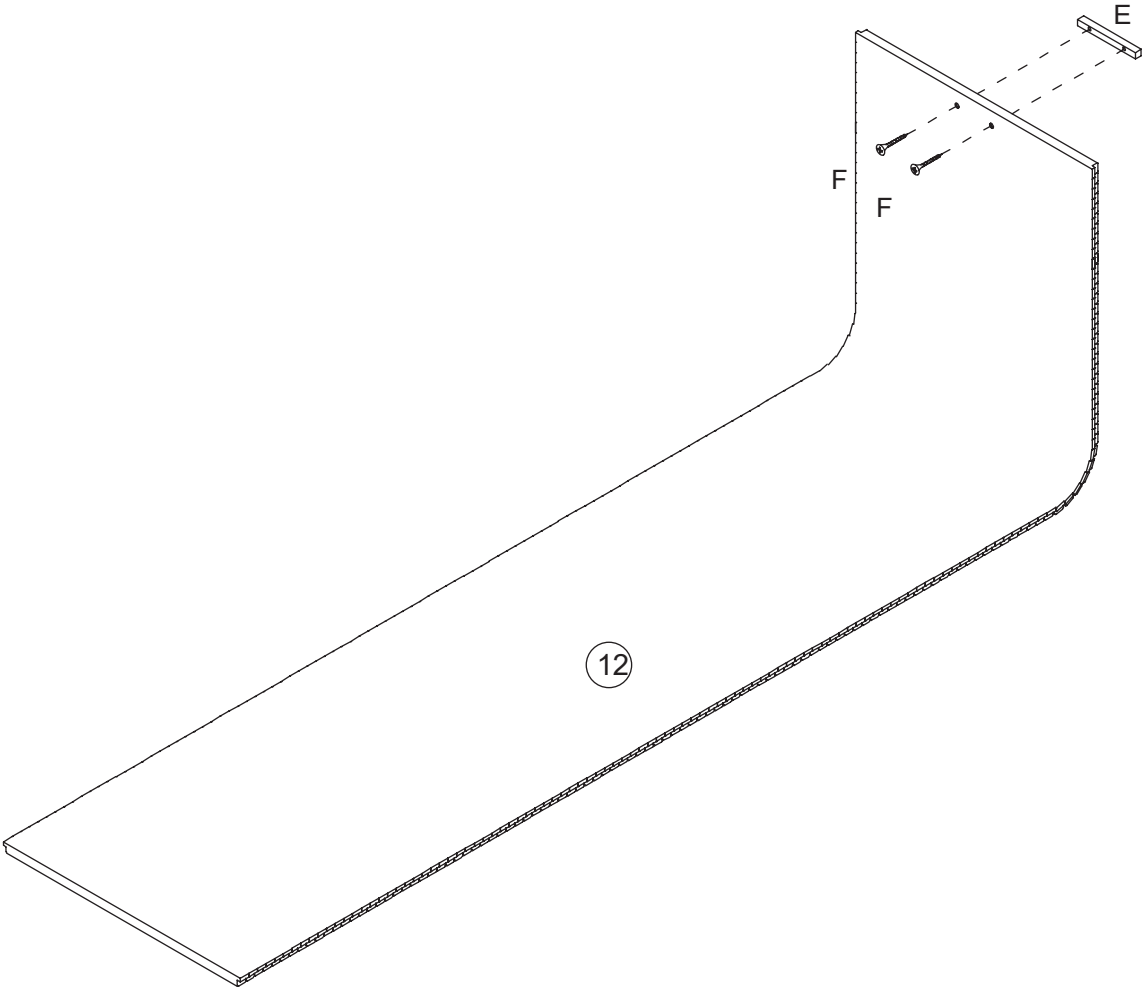


x2



STEP 13

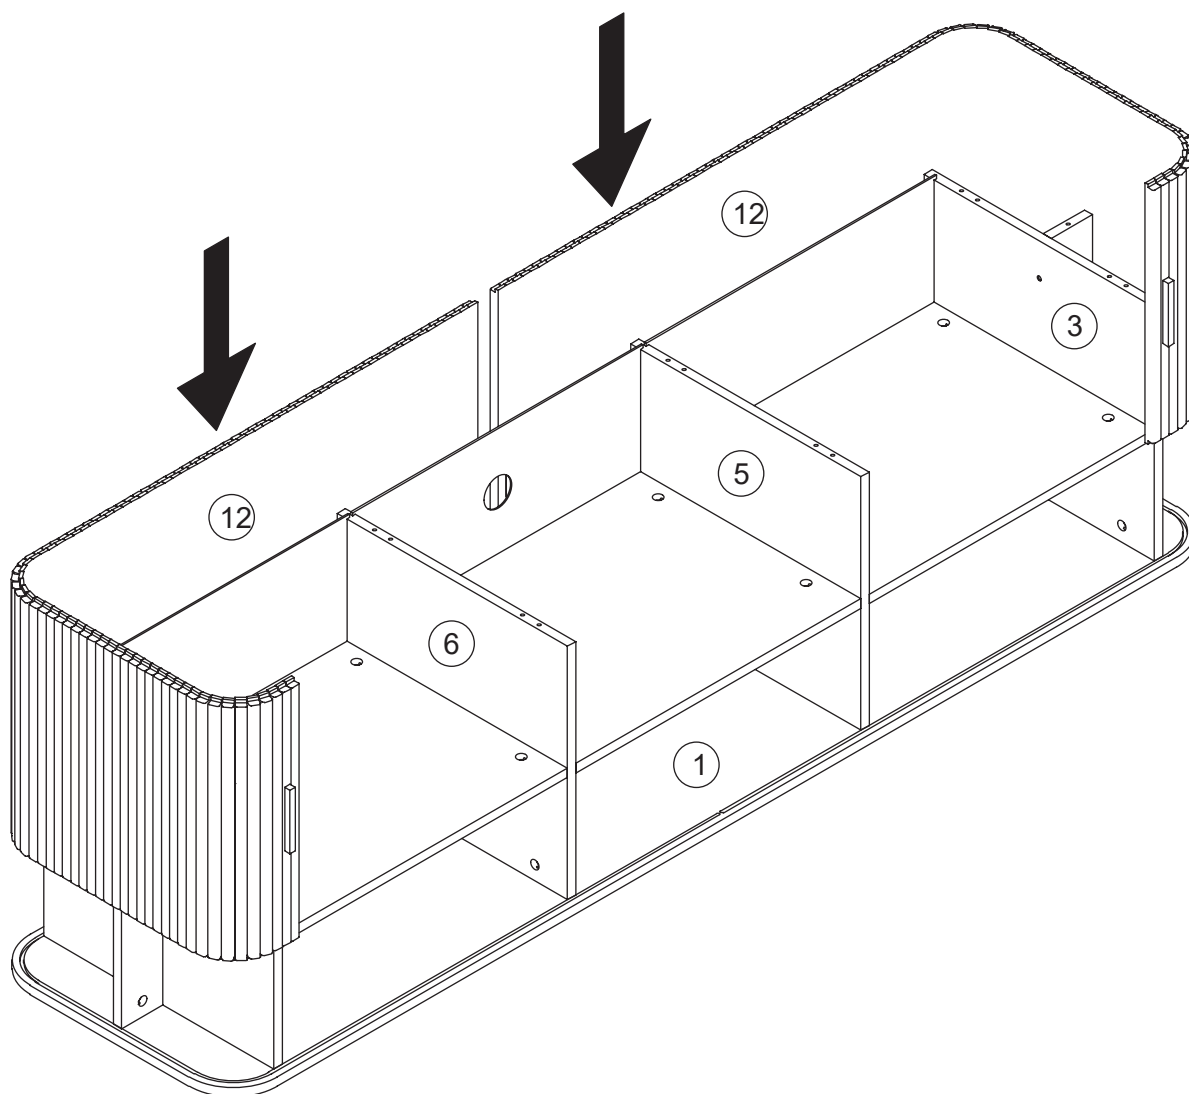

STEP 14

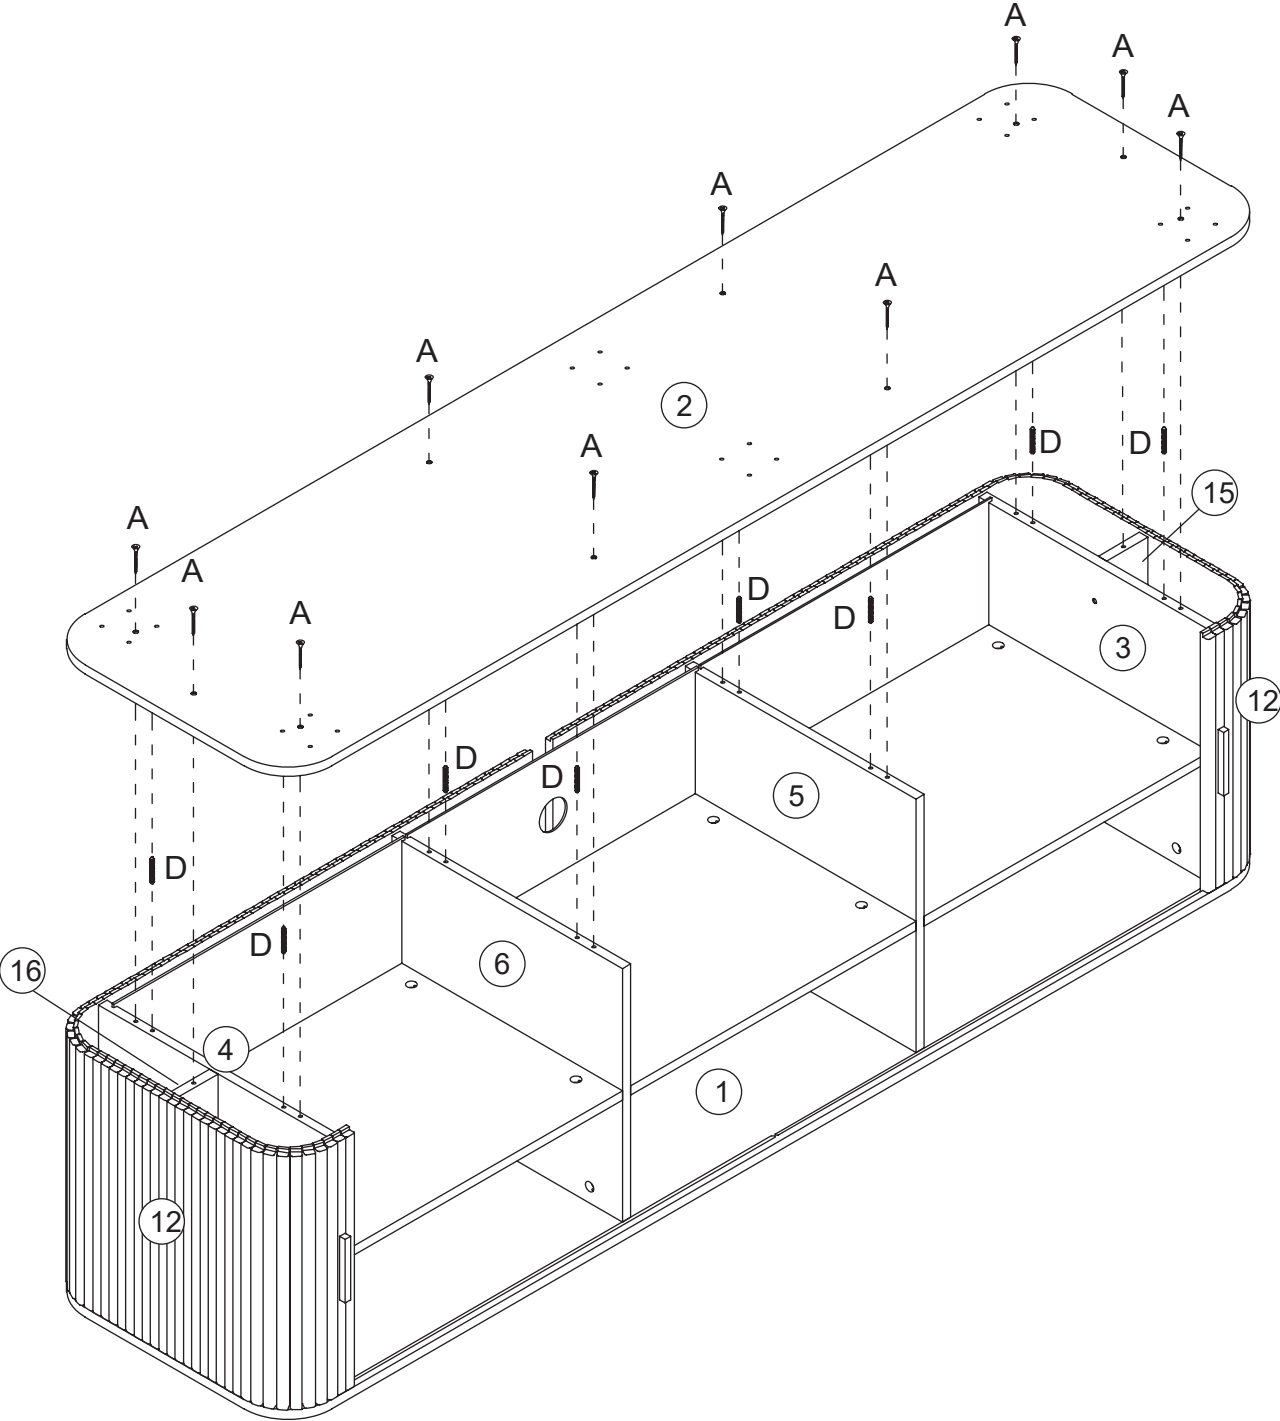




STEP 15

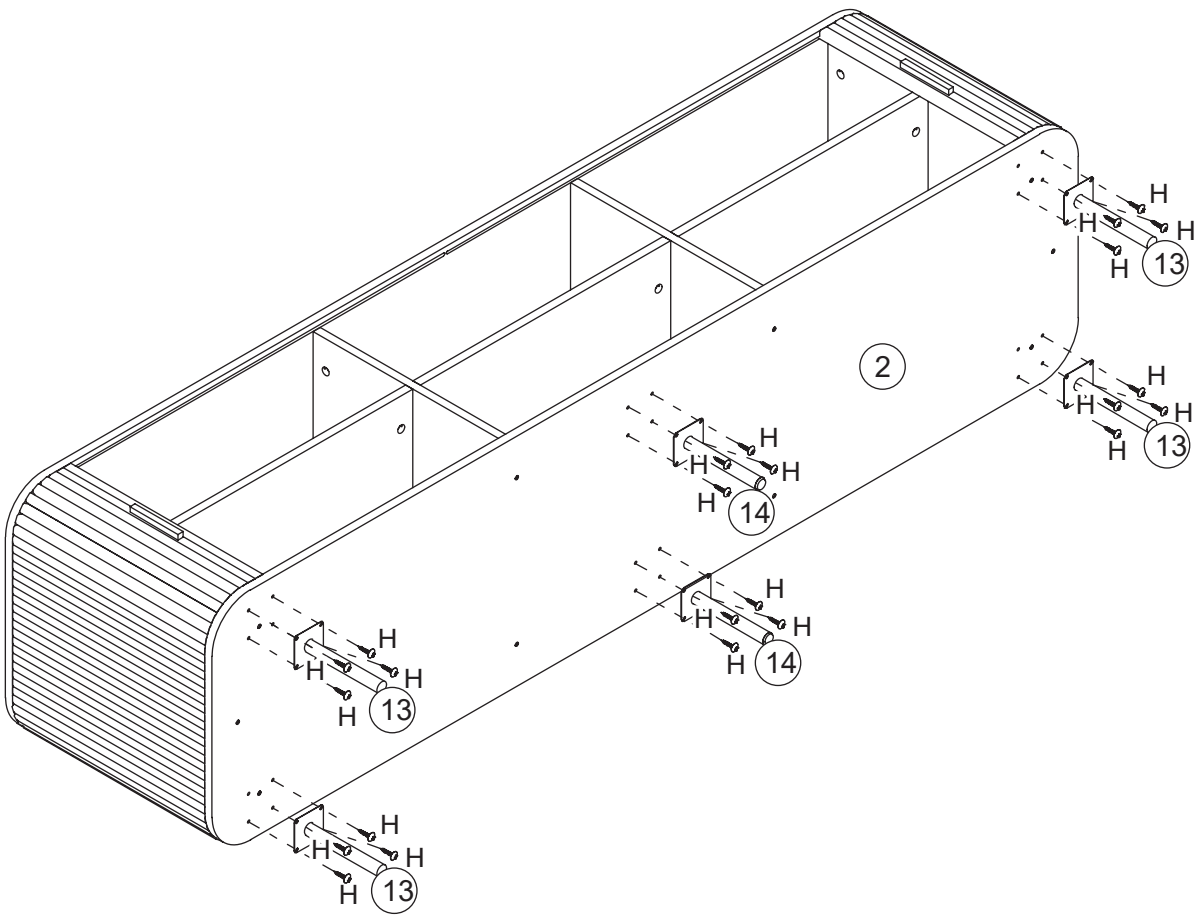



STEP 16

Secure parts 9, 10 and 11 by fixing wedge

ews (I), as shown.

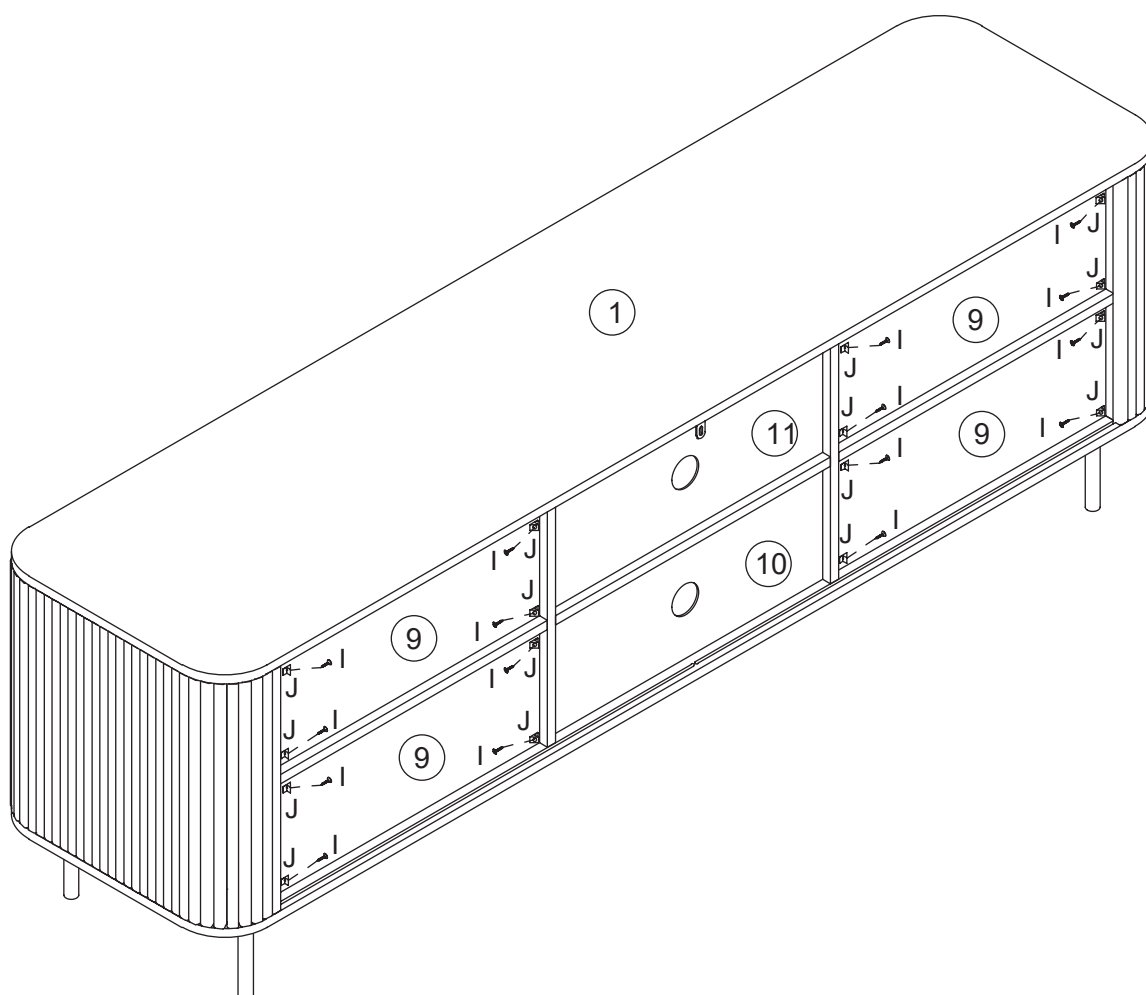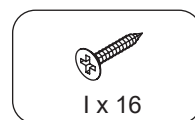

STEP 17

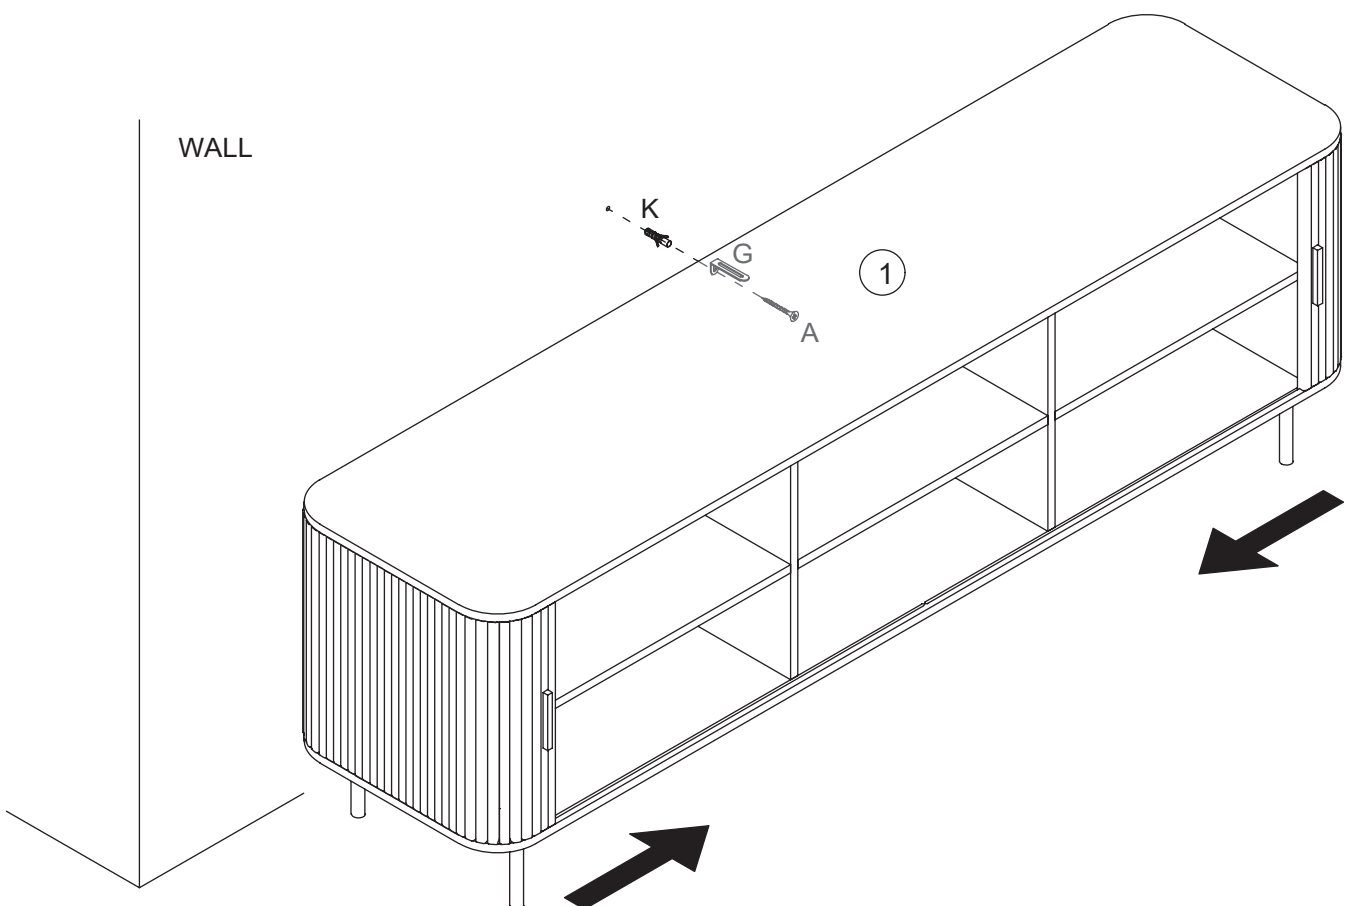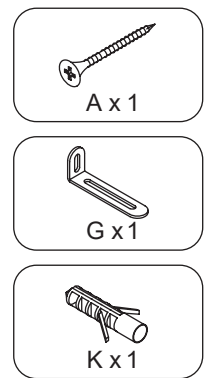

STEP 18

